



MANUAL

Installation / Operation / Maintenance



VF-9_A DOUBLE OFFSET BUTTERFLY VALVE

Flange STD	ASME CLASS 150 LB		
	ASME CLASS 300 LB		
Work pressure	TYPE	Temp	SIZE
150LB	VF-91_(A)	-100°C~260°C	2"~48"
	VF-92_(A)	-100°C~260°C	
	VF-93_(A)	-29°C~500°C	
300LB	VF-94_(A)	-100°C~260°C	2"~24"
	VF-95_(A)	-100°C~260°C	
	VF-96_(A)	-29°C~500°C	

Pd. date:2021, Edition 4, Number: 92001-O

Please read all of these instructions before installing your VF-9_A valve.

MADE IN TAIWAN

VALUE VALVES CO., LTD.

No. 9 Chung-Shan Road, Tu-Cheng Industrial District Tu-Cheng City, 236 Taipei, Taiwan
Tel : 886-2-22698000 Fax: 886-2-22686600 sales@valuevalves.com.tw www.valuevalves.com

1. THEORY OF OPERATION

Series VF-9_A is a double eccentric design high performance butterfly valve. The valve design is based on a double eccentric geometry of the disc rotating center, utilizing a floating radius machined seal ring. This design makes the disc come back and away from body seat. (Fig. 1-1). This design could decrease the seat friction and offer a lower torque, the seat could be replaced easily without removing the shaft. Since Teflon seat is equipped, the valve could be suitable for most of mediums below 200 C. The double eccentric disc design could offer seat a longer life and lower operating torque. When fluid pressure comes from either direction, the fluid pressure will affect disc and seal ring to a result of bi-directional shut off (Fig.1-2). On the other hand, the advantage of our patented seat retainer ring is equipped, so that there is no more leakage from the setting screw and flange connections. We believe that it is the best and smartest choice to use Value products.

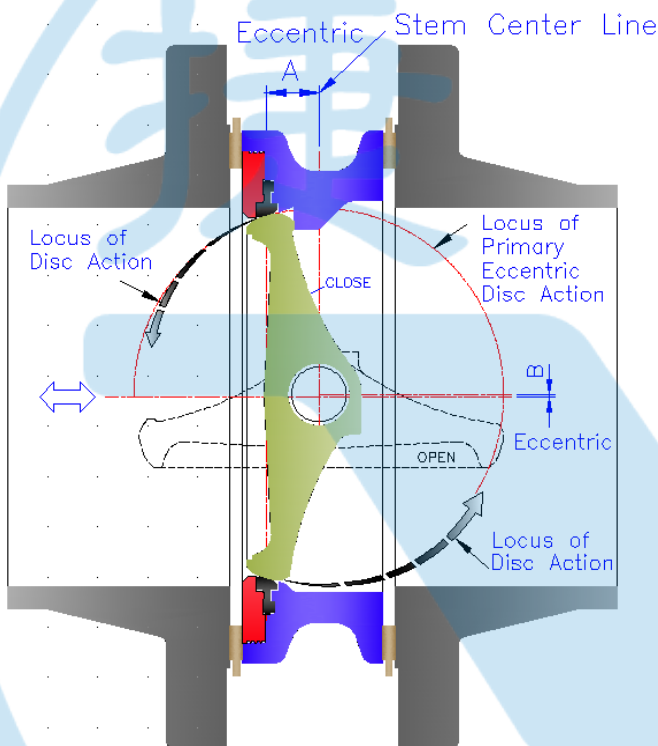


Fig.1-1

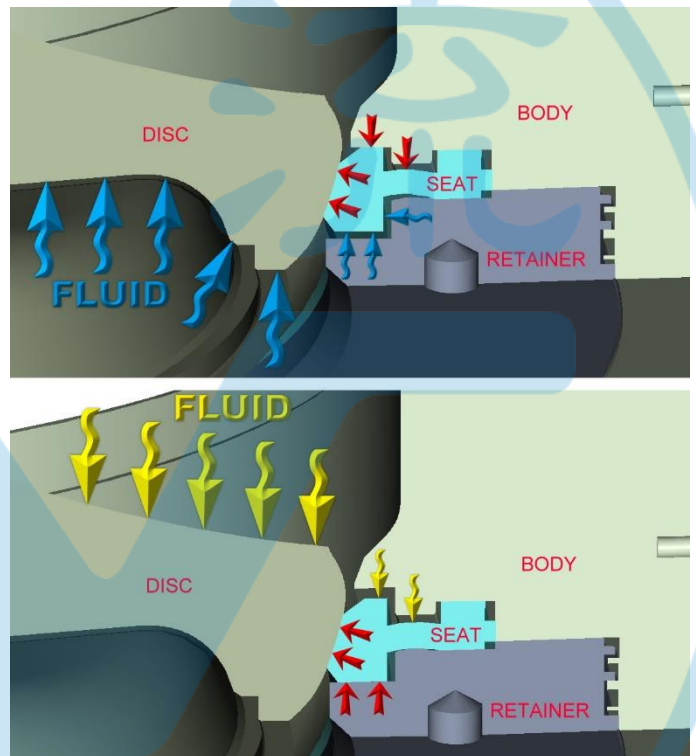


Fig.1-2

2. CAUTIONS

FOR SAFETY, FOLLOW THESE CAUTIONS BEFORE INSTALLING, REMOVING OR DISASSEMBLING YOUR VALVE.

1. **MUST KNOW WHAT MEDIA IS IN THE PIPELINE.**
2. **MAKE SURE THE LINE IS DEPRESSURED.**
3. **USE PROTECTIVE CLOTHING AND EQUIPMENT TO AVOID INJURY. KEEP HANDS AND OTHER BODY PARTS OUT OF THE VALVE.**
4. **ALWAYS ENSURE THE VALVE IS IN THE FULLY CLOSED POSITION BEFORE INSTALLATION, REMOVAL OR DISASSEMBLY.**
5. **KEEP CLEAN OF FLANGE FACES BEFORE INSTALLATION ON PIPELINE.**

3. INSPECTION

- 3.1. Before installation of the valve into the piping system, visually inspect the valve to determine if any damage has occurred during shipping. Particularly, inspect the actuator, shaft, valve interior, valve body and flanges. For proper operation of the valves, the seat and disc seal must be undamaged and free of foreign material. If other than superficial damage is discovered, contact Value Valves Co., Ltd. immediately, indicating the location and extent of the damage found.
- 3.2. If it is necessary to clean the valve, use a soft cloth and mineral spirits, or an equivalent solvent. All rust preventive should be removed before installing your valve.

4. TOOL REQUIREMENT

There are no special tools required for installation and maintenance that are not commercially available. Any lifting devices used to move the valve into a desired position shall be of sufficient size to support the weight of the valve and actuator assembly. The nylon slings, secured around the valve bearing areas, is recommended to reduce the possibility of mechanical damage occurring to the valve body and actuator. The assembly should never be lifted by the actuator. These areas are for removal and installation of the actuator to the valve only. (Fig.2)

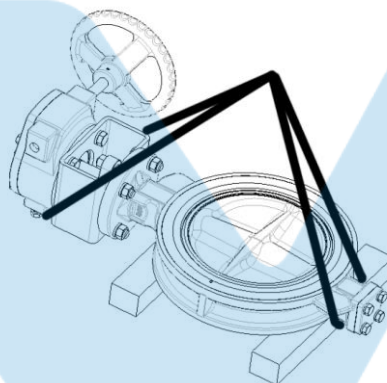


Fig.2

WARNING

NEVER pass a lifting device through the valve port or severe damage may occur.

5. STORAGE

5.1 SHORT TERM STORAGE : When the valve is not put into immediate service, it is required that the valve be stored in a heated building that is fire resistant, weather tight and well ventilated. Storage area shall be situated and constructed so that it will not be subject to flooding and any corrosive chemicals present. Any spare parts for the valve shall be stored in the original packaging and under the same conditions as the valve will be stored.

5.2 LONG TERM STORAGE (Storage greater than 4 months) : Value Valves

recommends that all valve actuator be cycled approximately every 6 months or as required by the manufacturer of the actuation system. The storage container should be inspected every 6 months to ensure it is in good condition, and any additional protective coverings or materials are in working order. Any spare parts for the valve shall be stored in the original packaging and under the same conditions as the valve will be stored. Ensure all parts are plugged, and bare metal is covered with a suitable rust inhibitor.

6. INSTALLATION

The valve must be installed so that pipeline stresses are not transmitted to the valve body. Despite its solid manufacture, such stress may affect valve operation. If pipeline stresses are severe, they should be cushioned by expansion joints or compensators. If supports are necessary for the valve, they should only support the dead weight of the valve and should not serve as base points for the pipeline.

7. STEPS OF INSTALLATION

- 7.1. All valve s must be in full closed position during installation or removal. It is not necessary to torque seat the valve, but the disc travel must be restricted to prevent damage.
- 7.2. Please be sure there is no foreign material and clean inside of the pipe and valve.
- 7.3. The shaft side of the disc is recommended installing at the low-pressure side of the valve, (as indicated on the drawings by a flow arrow) meaning the best closure performance is obtained on this side of the valve, and a determination as to the best installation should be made, to utilize this feature. This may not necessary be the normal flow direction of the system. (Fig.3).

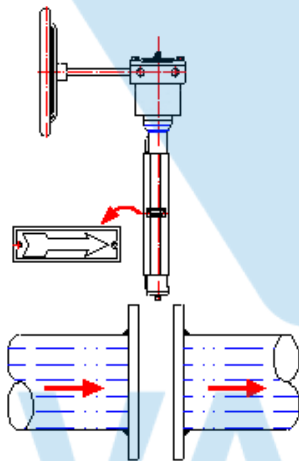


Fig.3

- 7.4. Please install the valve stem horizontally as (Fig.4), thus could prevent sand and some chips collect around bottom bushing and seat and damage the valve.

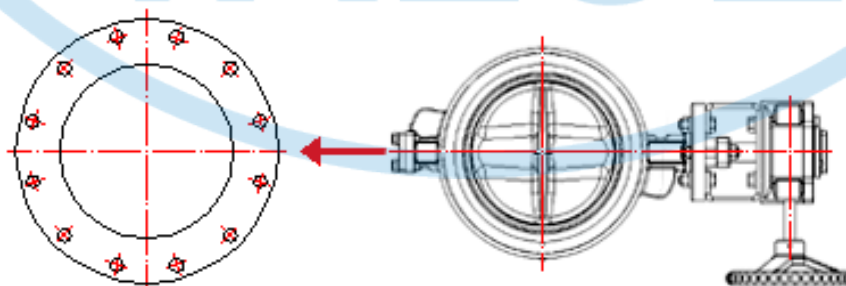


Fig.4

- 7.5. Install valve and gaskets into pipeline as (Fig.5).

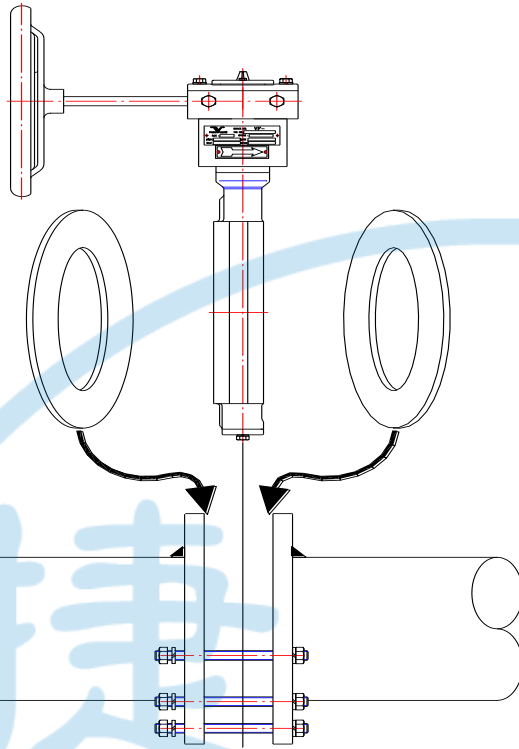


Fig.5

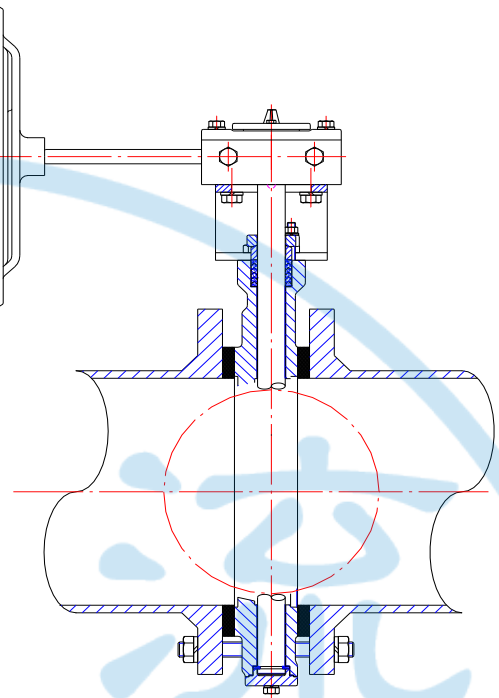


Fig.6

7.6. Make sure the valve to installed between flanges and concentrically with flanges, thus could prevent the disc damaged by the interfering with flange and pipeline (Fig.6)

Excellent

Good

No recommend

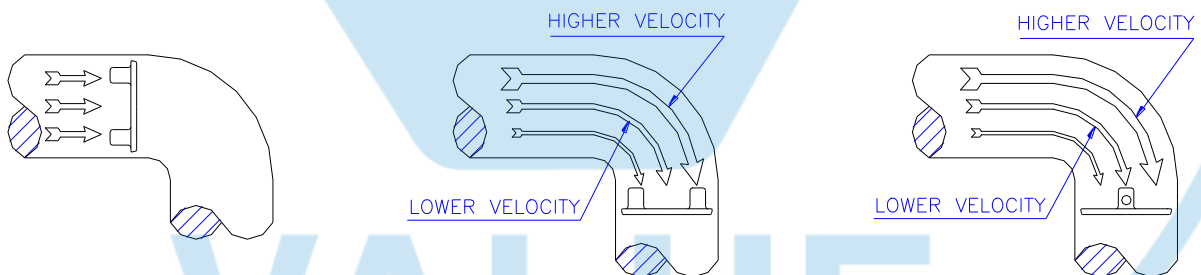


Fig.7

7.7. The typical installation for the butterfly valve connected to an elbow would be to align the shaft axis to allow equal flow on each side of the shaft, minimizing dynamic torque requirements for the valve. (Fig.7)

- 7.8. Using an extension tube between wafer check valve and butterfly valve, never connect them directly. (Fig.8)

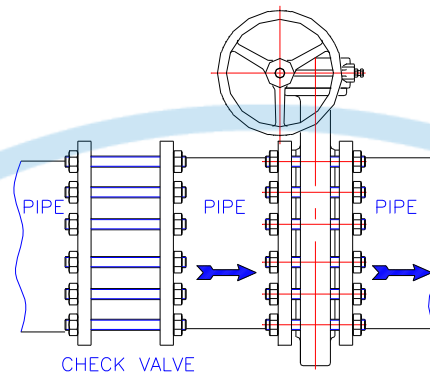


Fig.8

8. Flange Connecting & Bolting


- 8.1. Keep valve protection boards until installation.
- 8.2. Make sure the material and size of gaskets could be suitable for the service, check the faces of flange and valve are smooth and flat. Sandpaper the faces if there was any harm.
- 8.3. Check all the bolts and nuts shall be in good condition.
- 8.4. Apply lubricant such as Molybdenum to all the bolts and nuts before fix them.
- 8.5. The pipe support(s) may now be required to be partially disengaged. A determination as to pipe flange alignment and space between the pipe flange and the valve face must be made at this time. The optimum spacing would be such as to only allow the flange gasket to be installed, at the maximum, and the flange bolt holes would be concentric.
- 8.6. The opposite connecting pipe flange face may not be more than 1/4 inch away from the valve flange face. Alternate methods of alignment, other than using the flange bolts, must be utilized to conform with this requirement.
- 8.7. Install all studs, maintaining uniform clearance between the studs and the mating bolt holes. Additionally the studs spanning the valve assembly should not contact the valve body.
- 8.8. Seat the flange by alternate tightening of four equally-spaced flange bolts no more than 1/4 turn per bolt, until the flange faces seat. During this operation, it is advisable to continually check the relative distance between the flange faces. Torque the bolts to approximately 25% of the final torque value (see table 1).
- 8.9. Inspect the remaining bolts and assure correct alignment. Tighten to the same level as the first four bolts.
- 8.10. Complete the tightening of all flange bolting in a minimum of four increments to the final determined torque value.
- 8.11. Test cycle the valve to be sure that there is no interference or binding.

8.12. Maximum Torque of Flange Bolt

Bolt size	Torque	
	(ft-lb)	(Nm)
5/8" (M16)	110	150
3/4" (M20)	200	270
7/8" (M22)	320	434
1" (M26)	480	650
1-1/8" (M28)	600	815
1-1/4" (M32)	840	1140

Table 1.

BOLT TIGHTENING SEQUENCE (Fig.9)

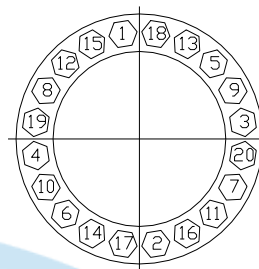

※Actual torque shall depend on gasket type, consult gasket manufacturer.

※Installation of valves and pipelines must refer to ASME PCC-1

9. Removal Procedure

To remove your valve from the pipeline, please follow these simple steps:

1. Ensure the valve is in the closed position.
2. Ensure the line is depressurized.
3. Use protective clothing and equipment to prevent injury.
4. If your valve is equipped with a fail-open actuator, manual to close the valve or disconnect the actuator then close the valve before removal.
5. Attach nylon slings to the body shoulders of the valve and around the body of the actuator.
6. Remove the bolts holding the valve to the pipeline flanges.

10. LUBRICATION SCHEDULE

VALUE recommends your valve be inspected at least every three months to determine lubrication and other maintenance requirements under your specific service conditions.

11. STUFFING BOX MAINTENANCE PROCEDURE

Routine maintenance of the stuffing box consists of tightening the packing gland periodically. If leakage around the stuffing box is discovered, first tighten the hex-nuts on the gland follower (more than 2/3 compression) as this may reduce packing life. If the leakage still persists, replace the packing according to the following procedure. (For clarity, the actuator and bracket are not shown in the following diagrams. It is not necessary to remove the actuator or bracket before performing this procedure).

11.1 Remove all of the packing in the stuffing box using a flexible screw hook.

VF-9A DOUBLE OFFSET BUTTERFLY VALVE

(Fig.10) For stuffing boxes that contain a lantern ring, use a puller with 10-32 threads to remove the lantern ring. Save the lantern ring for reuse, but discard the other packing material. Please replace all the gland packing no matter the gland packing is made of PTFE. (Fig.11)

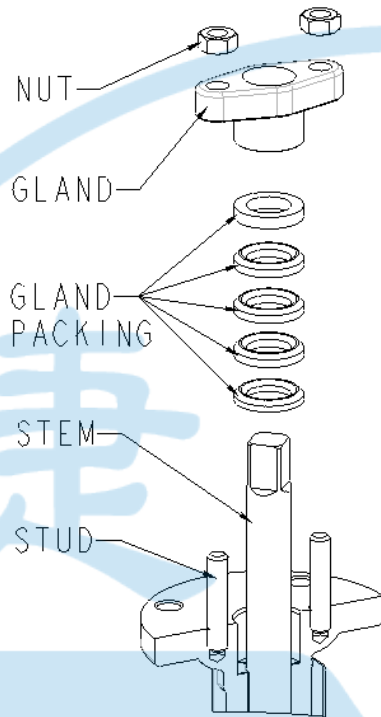


Fig.10


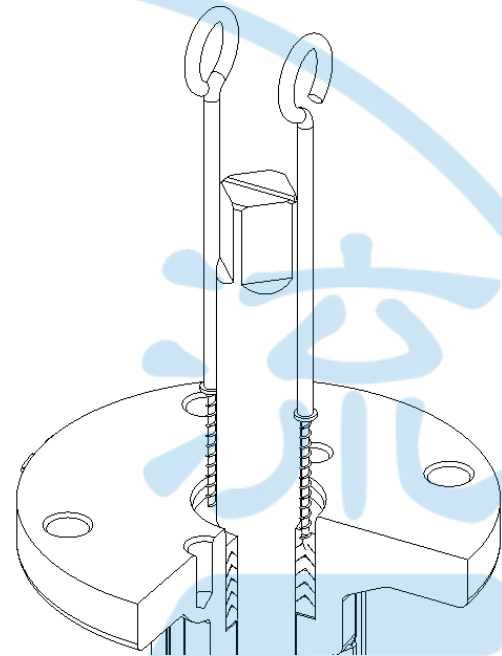


Fig.11

11.2 Inspect the drive shaft, bore of the stuffing box, and the gland follower. These surfaces should be relatively scratch free(Fig.12). If there is any damage, polish the surface to 32 rms finish. If any part has severe damage, contact VALUE VALVES CO., LTD. At +886-2-22698000.

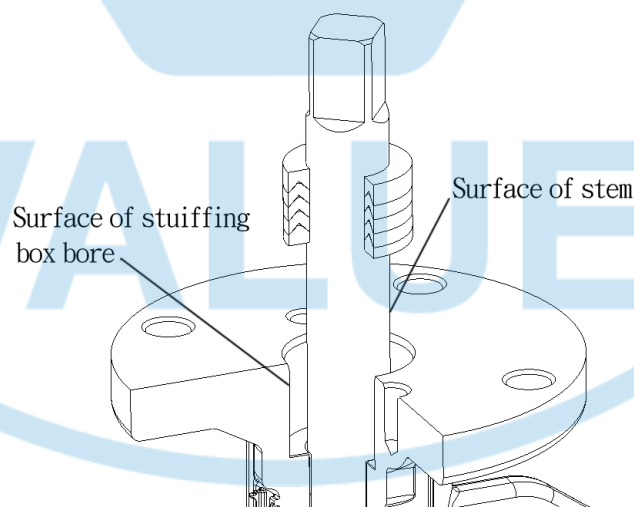

(Fig.12)

11.3 Install each new ring of packing, use the gland follower to push each ring of

VF-9A DOUBLE OFFSET BUTTERFLY VALVE

packing evenly into position after starting it in the stuffing box bore. Stagger the splice-joints of each packing ring so they are as far as possible from each other (see example above). Usually, rotating each ring until the splice is at 90° from the previous splice is sufficient. (Fig.13-1)

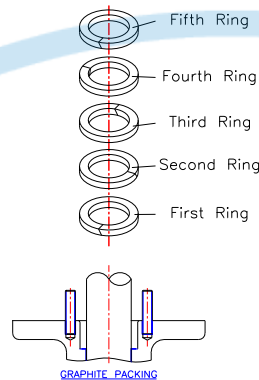


Fig.13-1

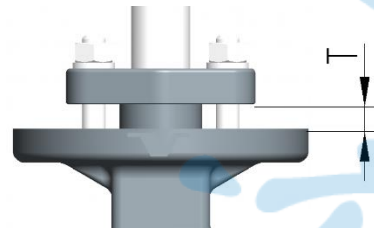


Fig.13-2

11.4 If new packing was V type PTFE packing, the recommended direction as below.

11.4.1 Inside of pipeline is positive pressure : Please follow (Fig.14)

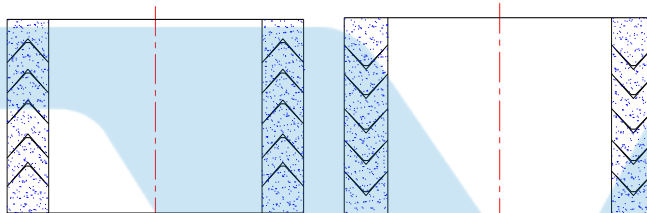


Fig.14

Fig.15

11.4.2 Inside of pipeline is vacuum : Please follow (Fig.15)

11.4.3 After the gland tighten, please reconfirm there is gap (see Fig 13-2) between gland and top flange. Please change the gland packing when “T” is lower than recommended dimension. (T is not less than 2mm)

11.5 Install the gland follower and tighten it to firmly seat the packing. DO NOT compress the gland follower too much. Over-tightening may dramatically reduce the life of the packing and may make it more difficult to operate the valve. The maximum torque of the gland screw as below: (See Table2).

Graphite Packing			PTFE “V” Type Packing		
Screw Size	Max. Torque		Screw Size	Max. Torque	
M8	110	Kg-cm	M8	110	Kg-cm
M10	120	Kg-cm	M10	120	Kg-cm
M12	140	Kg-cm	M12	140	Kg-cm
M16	450	Kg-cm	M16	220	Kg-cm
M20	650	Kg-cm	M20	275	Kg-cm

Table 2

12. Assembly and Disassembly

12.1 Assembly

- 12.1.1 Clean all valve components and free from oil, grease and dust.
- 12.1.2 Inspect all components for damage before starting to assemble. Look especially for damage to the disc edge and body seat surface.
- 12.1.3 Confirm that the valve disc of the valve is in the fully closed position. If not, operate the actuator so that the valve disc comes to the fully closed position.
- 12.1.4 Insert the seat to the seat-mounting groove. The seat is somewhat floating because there is an interference of the seat. (Fig.16)

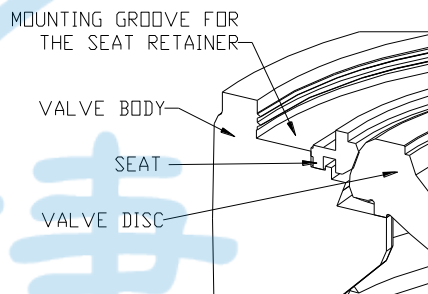


Fig.16

- 12.1.5 Insert the seat retainer to the mounting groove for the seat retainer. Due to the same reason as 12.1.4, the seat and the seat retainer is somewhat floating. (Fig.17)

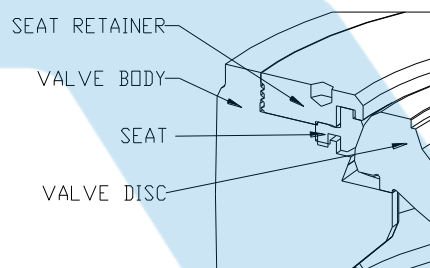


Fig.17-1 (DN50~DN600)

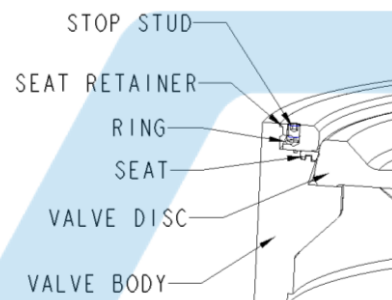


Fig.17-2 (DN650~DN1200)

- 12.1.6 Turn and tighten the retainer clockwise.
- 12.1.7 Since our new design of fixing the retainer, it's a normal condition when the retainer was tightened, and there is a gap less than 1mm between valve face and retainer face. (Fig.18)


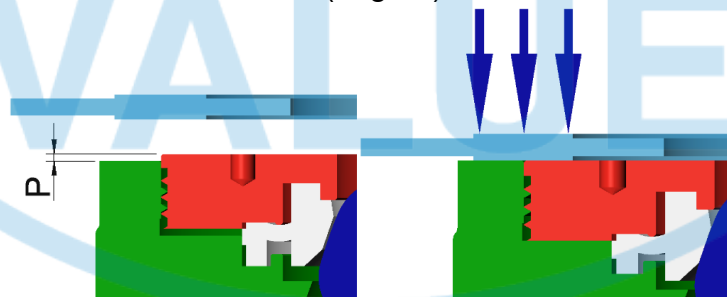


Fig.18

- 12.1.8 Slightly open the valve to 10 degrees then tighten the retainer ring again.

(When changing the VF-93_A/VF-96_A metal seat, please keep disc fully closed.)

- 12.1.9 Operate the actuator again to bring the disc to the fully closed position before mounting to the piping.
- 12.1.10. Insert the studs into the threaded holes in the drive side packing gland.
- 12.1.11. Install the packing follower and tighten it into position with the hex nuts. Do not tighten on hex nut further than the other.
- 12.1.12. Install the bottom cover with gasket and tighten it into position with the hex-socket cap screws.
- 12.1.13. The valve is now ready for actuator mounting. The disc is held quite securely in position, so the actuator may be pushed onto the shaft then moved to the desired fail position. Please consult the actuator's literature for further details.
- 12.1.14. When installing the stem, set the mounting surface up. The disc indication is set on the let hand side of the retainer side, and the indicator groove or KEY WAY has to be paralleled to the disc.(Fig.19)

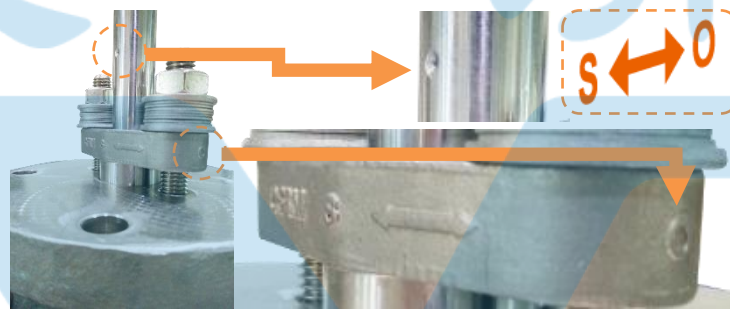

(Fig.19)

12.2. Disassembly

- 12.2.1. Place the valve on a bench or other suitable working surface with the drive shaft side of the valve up. Remove the actuator and actuator bracket from the valve. (Fig.20)

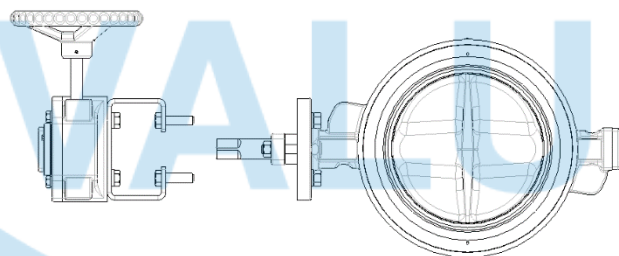


Fig.20

- 12.2.2. Separate the packing follower by removing the hex-nuts from the studs, then remove the studs.
- 12.2.3. Remove the packing using a flexible screw-hook.
- 12.2.4. Remove the packing retainer, being careful not to damage the finish of the

packing gland bore or the drive shaft.

12.2.5. VF-91_A (24" and below): Please turn on the disc slightly by counterclockwise at firstly, remove the retainer(Fig.21-1) by counterclockwise rotation, and then remove the seat. (Fig.21-2).

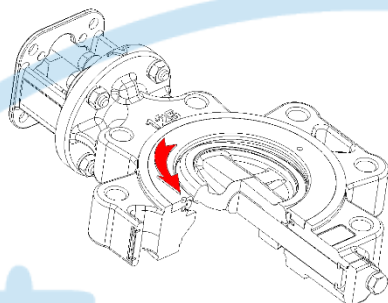


Fig.21-1

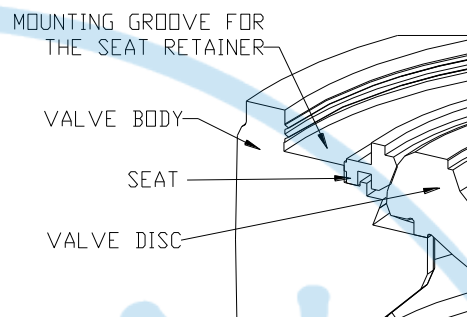


Fig.21-2

12.2.6. For the size 26" or above, turn the disc to the position as shown in Fig 22-1. To loose the stop stud on the seat retainer (Fig 22-2), and remove the retainer and seat (Fig 22-3).

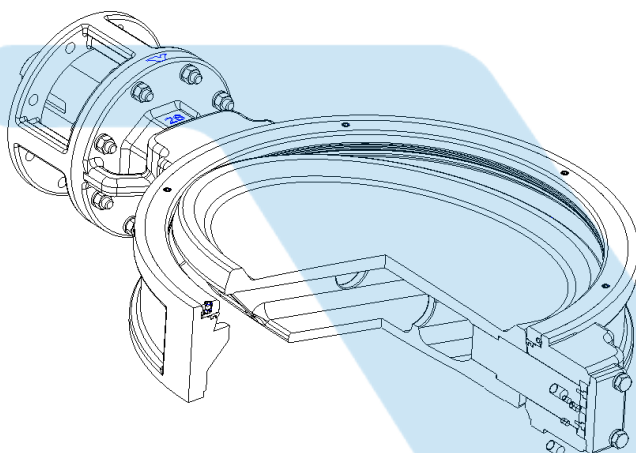


Fig.22-1

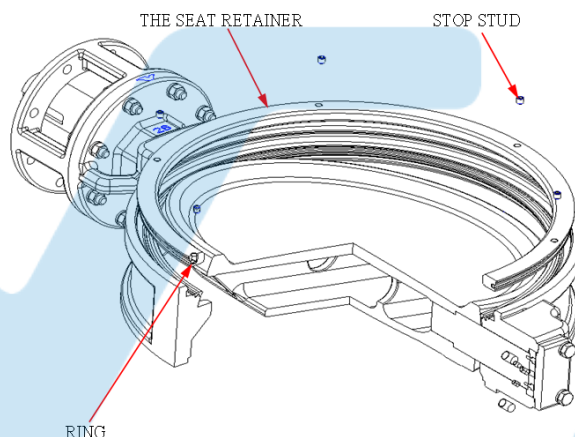


Fig.22-2

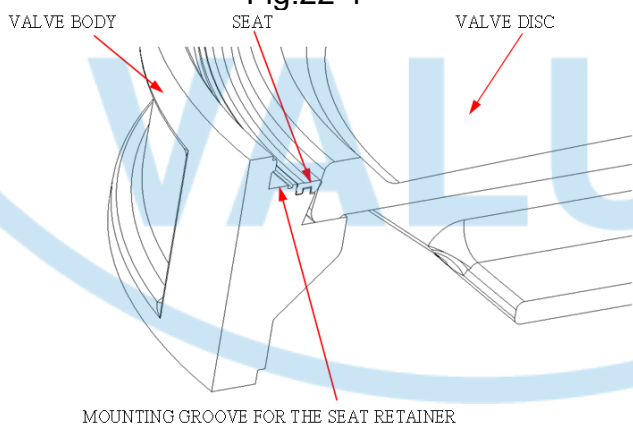


Fig.22-3

13. Parts and Service

13.1. Parts and service kits for most valve components are readily available. For parts

VF-9A DOUBLE OFFSET BUTTERFLY VALVE

or service information, contact VALUE VALVES CO., LTD., stating the complete data from the valve identification plate and specify what is required.

VF-91_A (2"~24")/VF-94_A (5")below Spare parts			
No.	Name	Spare parts	Qty
4	SEAT	*	1
6	BUSHING	*	1
6-1	BUSHING	*	1
6-2	BUSHING	*	1
6-3	BUSHING	*	2
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD	*	2
12	SMOOTH PAD	*	1
17	SPRING(12"and below)	*	1

TABLE.3-1

VF-91_A(26"~48") Spare parts			
No.	Name	Spare parts	Qty
4	SOFT SEAT	*	1
6	BUSHING	*	1
6-3	BUSHING	*	1
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD (26"、28")	*	1
12	SMOOTH PAD	*	1
18	BEARING	*	1

TABLE.3-2

VF-92_A (2"~24")/VF-95_A (5") Below Spare parts

No.	Name	Spare parts	Qty
4	SOFT SEAT	*	1
4-1	METAL SEAT	*	1
4-2	GASKTE.	*	1
6	BUSHING	*	1
6-1	BUSHING	*	1
6-2	BUSHING	*	1
6-3	BUSHING	*	2
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD	*	1
12	SMOOTH PAD	*	1
17	SPRING(12"and below)	*	1

TABLE.3-3

VF-93_A(2"~24")/VF-96_A(5"Below) Spare parts			
No.	Name	Spare parts	Qty
4	METAL SEAT	*	1
4-1	GASKTE.	*	1
6	BUSHING	*	1
6-1	BUSHING	*	1
6-2	BUSHING	*	1
6-3	BUSHING	*	2
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD	*	1
12	SMOOTH PAD	*	1
17	SPRING(12"and below)	*	1

TABLE.3-4

VF-93_A (26"~48") Spare parts			
No.	Name	Spare parts	Qty

4	METAL SEAT	*	1
4-1	GASKET	*	1
6	BUSHING	*	1
6-3	BUSHING	*	1
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD (26"、28")	*	1
12	SMOOTH PAD	*	1
18	BEARING	*	1

TABLE.3-5

VF-94_A (6"~24") Spare parts			
No.	Name	Spare parts	Qty
4	SOFT SEAT	*	1
6	BUSHING	*	1
6-1	BUSHING	*	1
6-2	BUSHING	*	1
6-3	BUSHING	*	1
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	2
11	STOP STUD	*	1
12	SMOOTH PAD	*	1

TABLE.3-6

VF-95_A(6"~12") Spare parts

No.	Name	Spare parts	Qty
4	SOFT SEAT	*	1
4-1	METAL SEAT	*	1
4-2	GASKTE	*	1
6	BUSHING	*	1
6-1	BUSHING	*	1
6-2	BUSHING	*	1
6-3	BUSHING	*	2
8	GLAND PACKING	*	1 set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD	*	1
12	SMOOTH PAD	*	1

TABLE.3-7

VF-96_A(6"~12")Spare parts			
No.	Name	Spare parts	Qty
4	METAL SEAT	*	1
4-1	GASKTE	*	1
6	BUSHING	*	1
6-1	BUSHING	*	1
6-2	BUSHING	*	1
6-3	BUSHING	*	2
8	GLAND PACKING	*	1set
9-1	BOTTOM COVER GASKET	*	1
11	STOP STUD	*	1
12	SMOOTH PAD	*	1

TABLE.3-8

14. Troubleshooting Guide

You may try the following procedures before contacting VALUE VALVES. If your valve doesn't operate properly before or after trying these trouble-shooting ideas, you may contact VALUE at +886-2-2269 8000 for assistance.


14.1. LEAKAGE FROM STUFFING BOX

If leakage around the stuffing box is discovered, first tighten the nuts on the gland follower to stop the leakage. Do not over tighten the gland follower (more than 2/3 compression) as this may reduce packing life. If the leakage still persists, replace the packing according to the procedure in the "Stuffing Box Maintenance Procedure" section. (For tightening torque, please see Table 2 page 9.)

14.2. LEAKAGE BETWEEN SEAL AND DISC


Inspect disc edge and seat for damage or excessive wear. If necessary, the disc edge may be lightly hand polished using wet 400 grit sandpaper. If leakage persists, or if not damage is evident, replacement of the seat. Re-check for leakage. If leakage still preexists, contact VALUE VALVES for repair.

VF-91_A(2"~24")/VF-94_A (5")below Spare parts

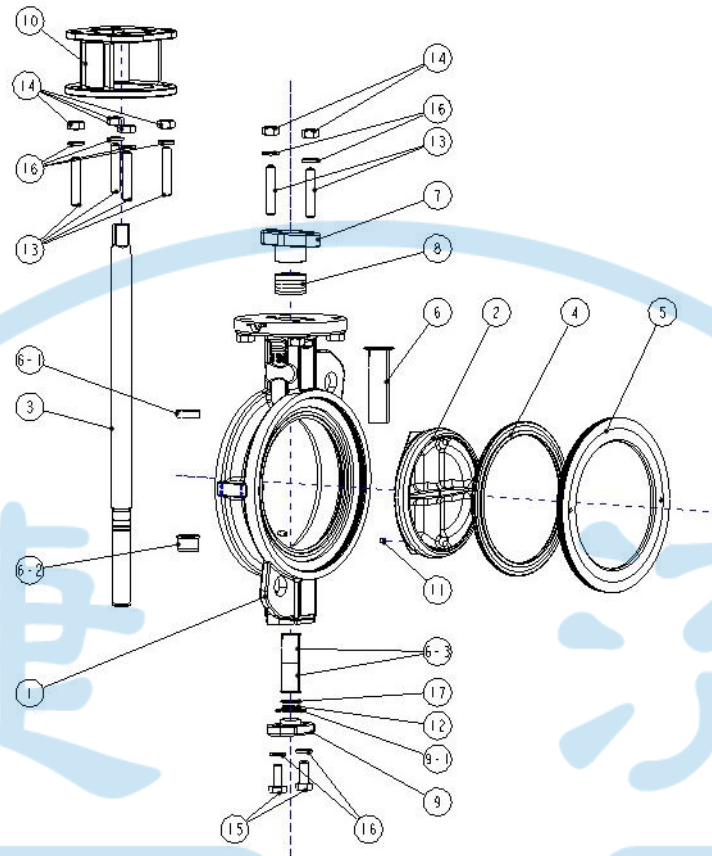


No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		9	BOTTOM COVER	
2	DISC		9-1	BOTTOM COVER GASKET	*
3	SHAFT		10	YOKE	
4	SEAT	*	11	STOP STUD	*
5	RETAINER		12	SMOOTH PAD	*
6	BUSHING	*	13	STUD	
6-1	BUSHING	*	14	NUT	
6-2	BUSHING	*	15	BOLT	
6-3	BUSHING	*	16	SPRING WASHER	
7	GLAND		17	SPRING (12"↓)	*
8	GLAND PACKING	*			

VF-94_A(6"~24") Series

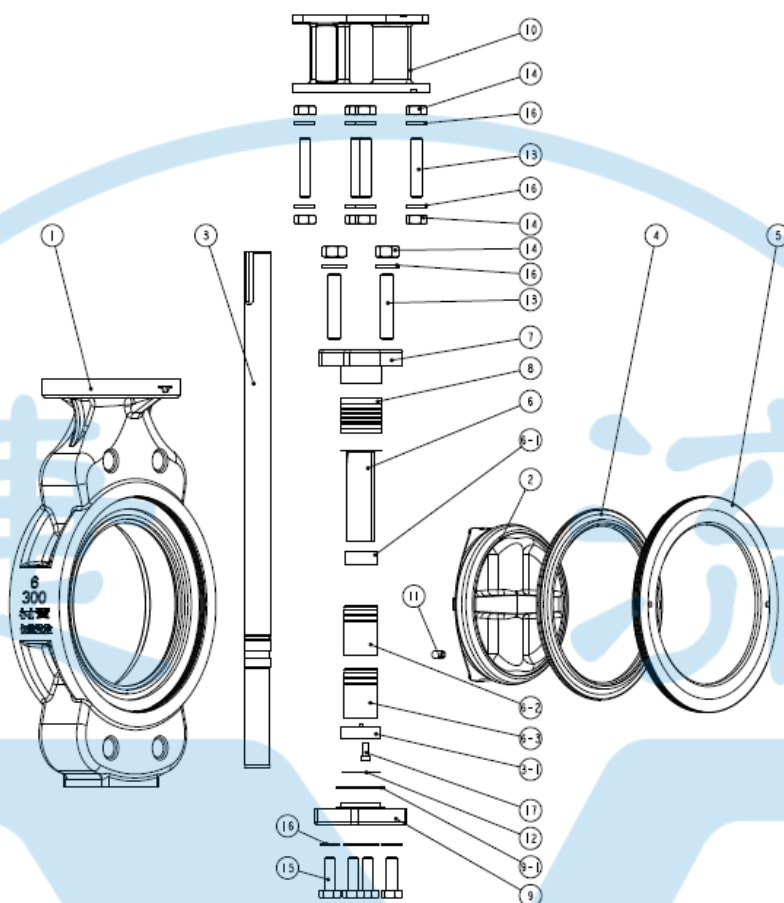


No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	SHAFT STOP		10	YOKE	
4	SOFT SEAT	*	11	STOP STUD	*
5	RETAINER		12	SMOOTH PAD	*
6	BUSHING	*	13	STUD	
6-1	BUSHING	*	14	NUT	
6-2	BUSHING	*	15	BOLT	
6-3	BUSHING	*	16	SPRING WASHER	
7	GLAND		17	SOCKET BOLT	

VF-9A DOUBLE OFFSET BUTTERFLY VALVE VF-95_A(6"~12") Series

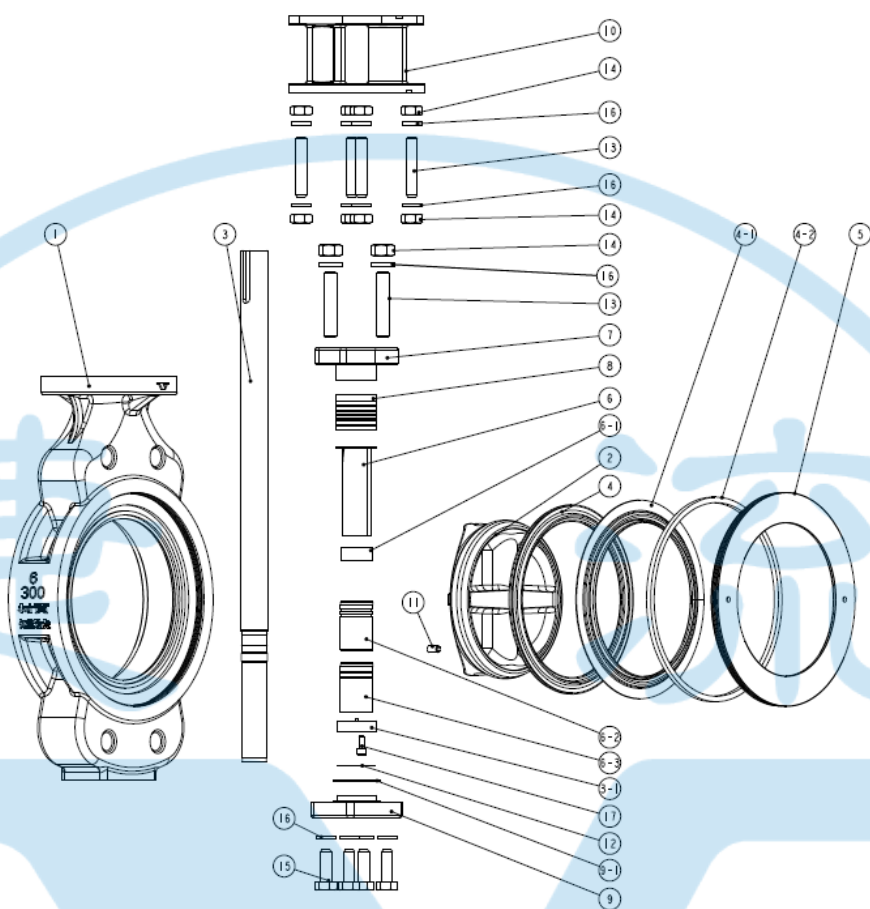

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	SHAFT STOP		10	YOKE	
4	SOFT SEAT	*	11	STOP STUD	*
4-1	METAL SEAT	*	12	SMOOTH PAD	*
4-2	GASKTE	*	13	STUD	
5	RETAINER		14	NUT	
6	BUSHING	*	15	BOLT	
6-1	BUSHING	*	16	SPRING WASHER	
6-2	BUSHING	*	17	SOCKET BOLT	
6-3	BUSHING	*			
7	GLAND				


VF-9A DOUBLE OFFSET BUTTERFLY VALVE VF-96_A(6"~12") Series

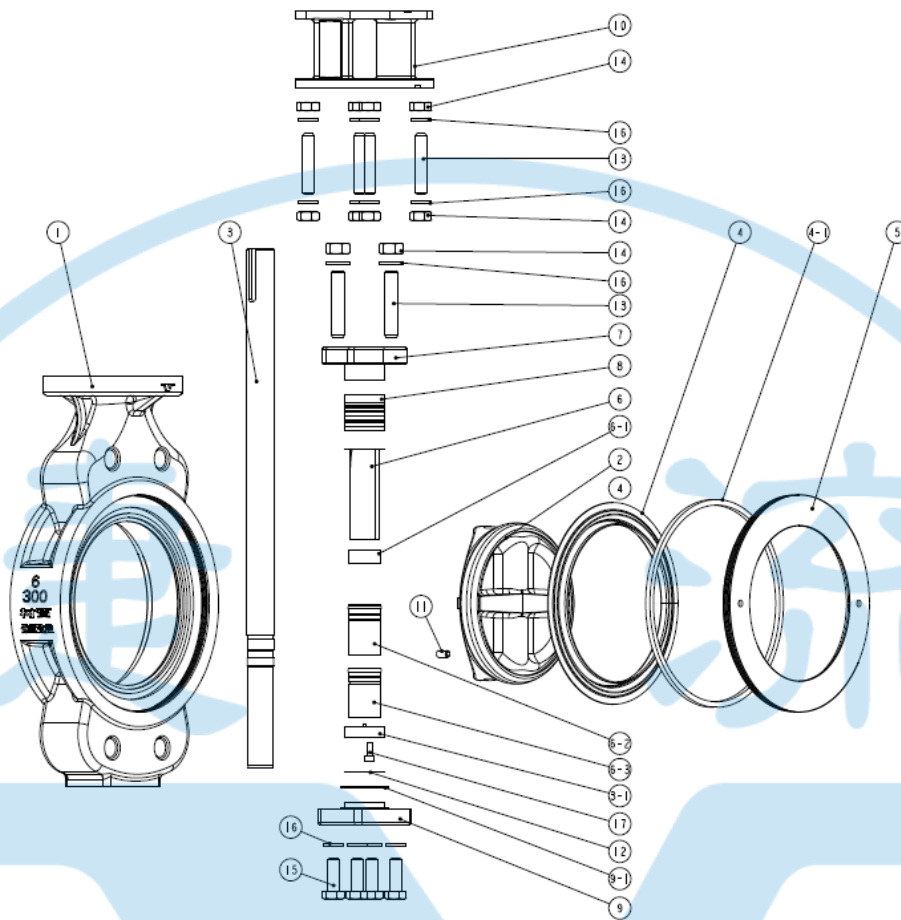

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	SHAFT STOP		10	YOKE	
4	METAL SEAT	*	11	STOP STUD	*
4-1	GASKET	*	12	SMOOTH PAD	*
5	RETAINER		13	STUD	
6	BUSHING	*	14	NUT	
6-1	BUSHING	*	15	BOLT	
6-2	BUSHING	*	16	SPRING WASHER	
6-3	BUSHING	*	17	SOCKET BOLT	
7	GLAND				

VF-9A DOUBLE OFFSET BUTTERFLY VALVE


VF-91_A(26"~28") Spare parts

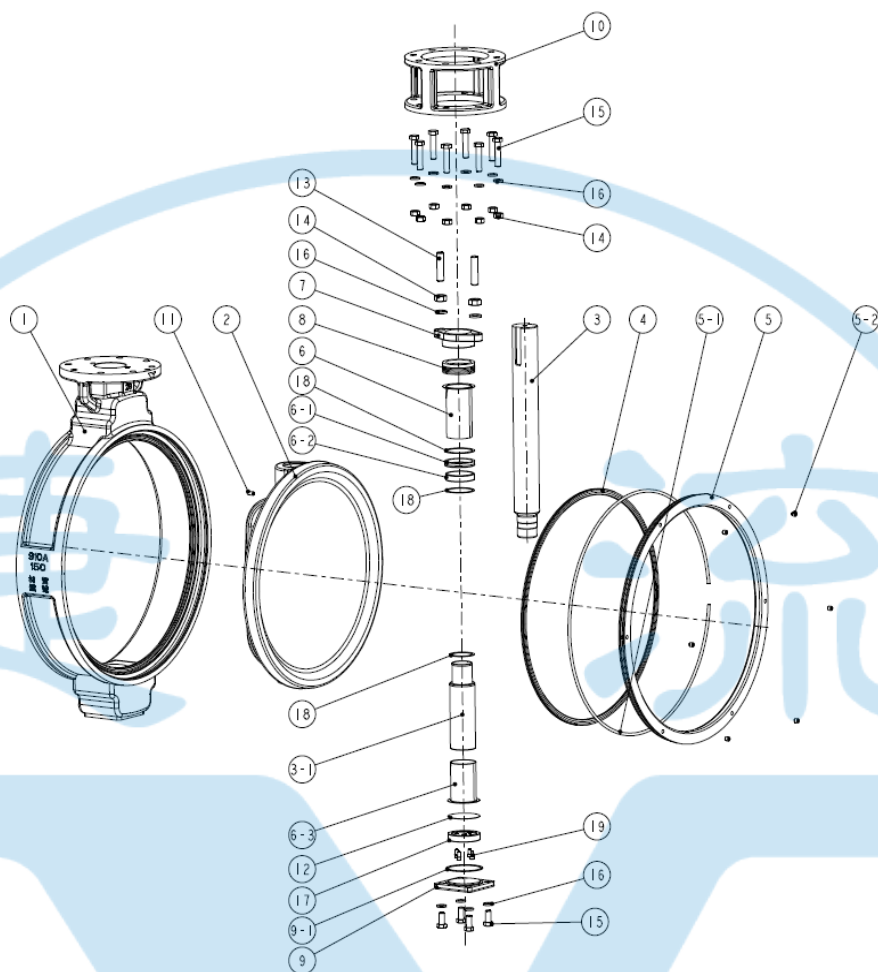

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	DOWN SHAFT		10	YOKE	
4	SEAT	*	11	STOP STUD	*
5	RETAINER		12	SMOOTH PAD	*
5-1	RING		13	STUD	
5-2	STOP STUD		14	NUT	
6	BUSHING	*	15	BOLT	
6-1	BUSHING		16	SPRING WASHER	
6-2	BUSHING		17	SHAFT STOP	
6-3	BUSHING	*	18	BEARING	*
7	GLAND		19	SOCKET BOLT	

VF-9A DOUBLE OFFSET BUTTERFLY VALVE


VF-93_A(26"~28") Spare parts

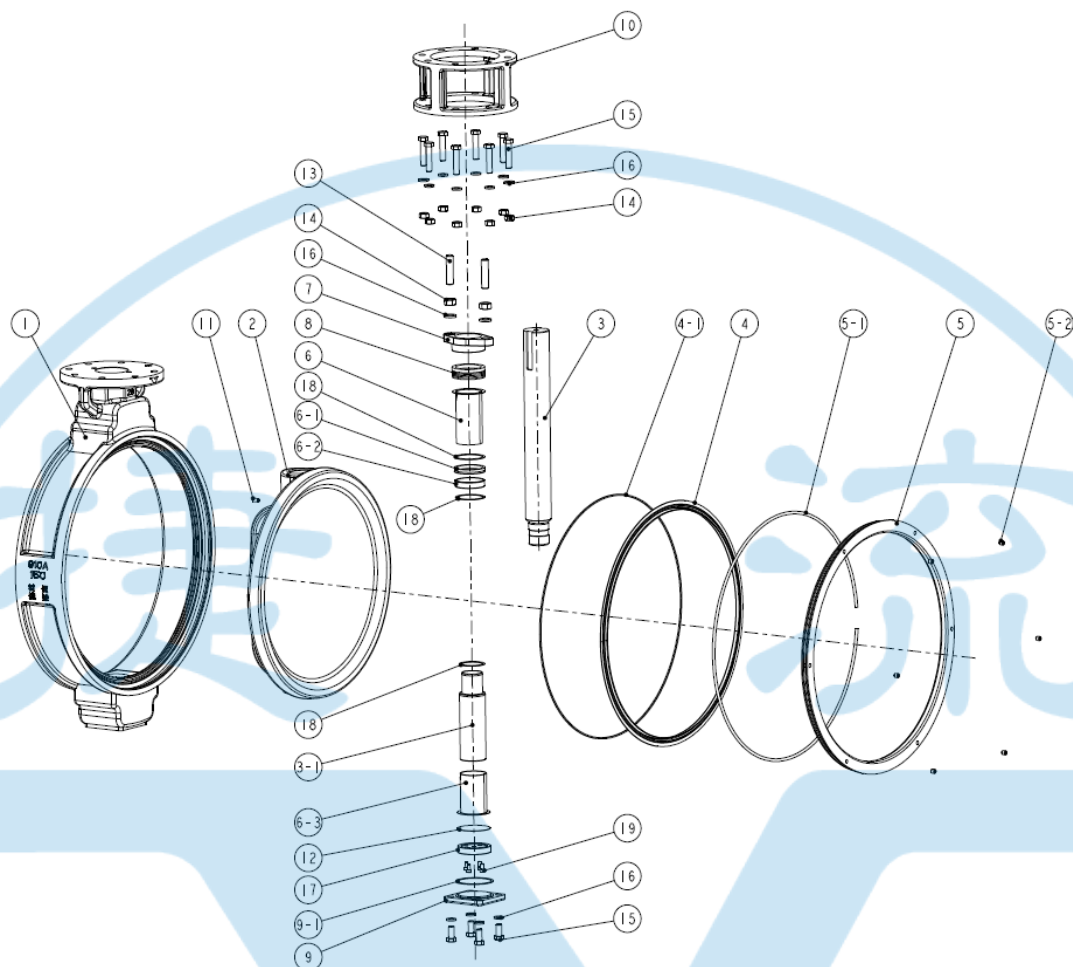

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	DOWN SHAFT		10	YOKE	
4	METAL SEAT	*	11	STOP STUD	*
4-1	GASKTE.	*	12	SMOOTH PAD	*
5	RETAINER		13	STUD	
5-1	RING		14	NUT	
5-2	STOP STUD		15	BOLT	
6	BUSHING	*	16	SPRING WASHER	
6-1	BUSHING		17	SHAFT STOP	
6-2	BUSHING		18	BEARING	*
6-3	BUSHING	*	19	SOCKET BOLT	
7	GLAND				

VF-9A DOUBLE OFFSET BUTTERFLY VALVE


VF-91_A(30"~48") Spare parts

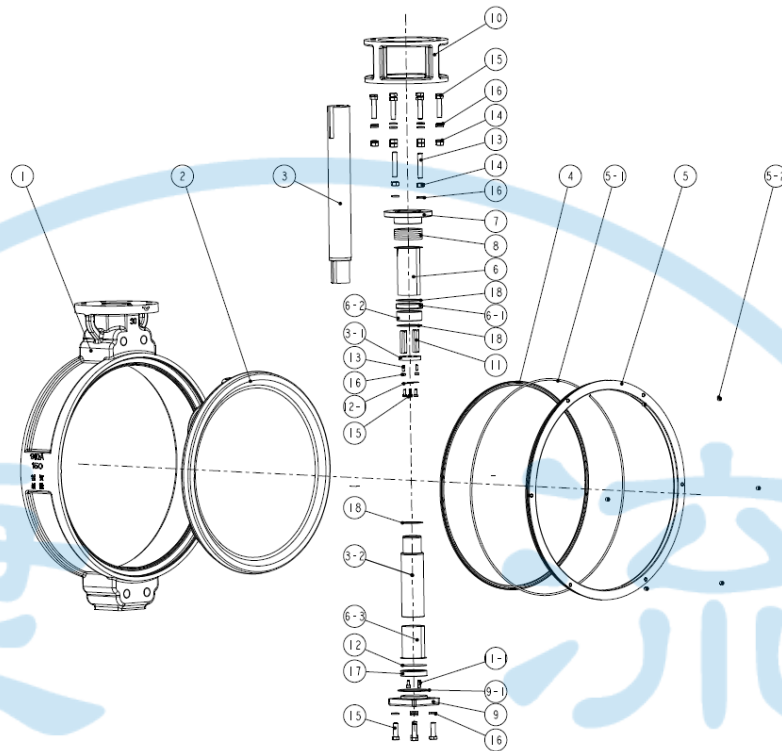

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	UP SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	UP SHAFT STOP		10	YOKE	
3-2	DOWN SHAFT		11	KEY	*
4	SEAT	*	12	SMOOTH PAD	*
5	RETAINER		12-1	LOCK PLATE	
5-1	RING		13	STUD	
5-2	STOP STUD		14	NUT	
6	BUSHING	*	15	BOLT	
6-1	BUSHING		16	SPRING WASHER	
6-2	BUSHING		17	SHAFT STOP	
6-3	BUSHING	*	18	BEARING	*
7	GLAND		19	SOCKET BOLT	

VF-9A DOUBLE OFFSET BUTTERFLY VALVE


VF-93_A(30"~48") Spare parts

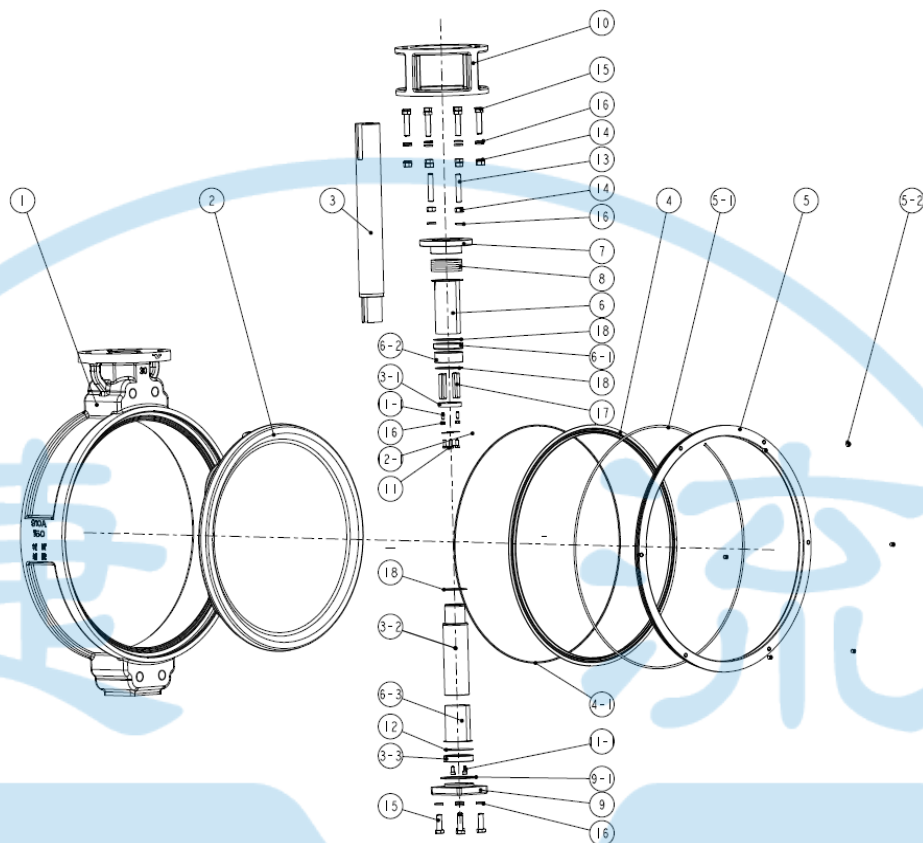

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	UP SHAFT		9-1	BOTTOM COVER GASKET	*
3-1	UP SHAFT STOP		10	YOKE	
3-2	DOWN SHAFT		11	KEY	*
4	METAL SEAT	*	12	SMOOTH PAD	*
4-1	GASKET	*	12-1	LOCK PLATE	
5	RETAINER		13	STUD	
5-1	RING		14	NUT	
5-2	STOP STUD		15	BOLT	
6	BUSHING	*	16	SPRING WASHER	
6-1	BUSHING		17	SHAFT STOP	
6-2	BUSHING		18	BEARING	*
6-3	BUSHING	*	19	SOCKET BOLT	
7	GLAND				


VF-9A DOUBLE OFFSET BUTTERFLY VALVE

VF-92_A(2"~24") / VF-95_A (5" and below) Series

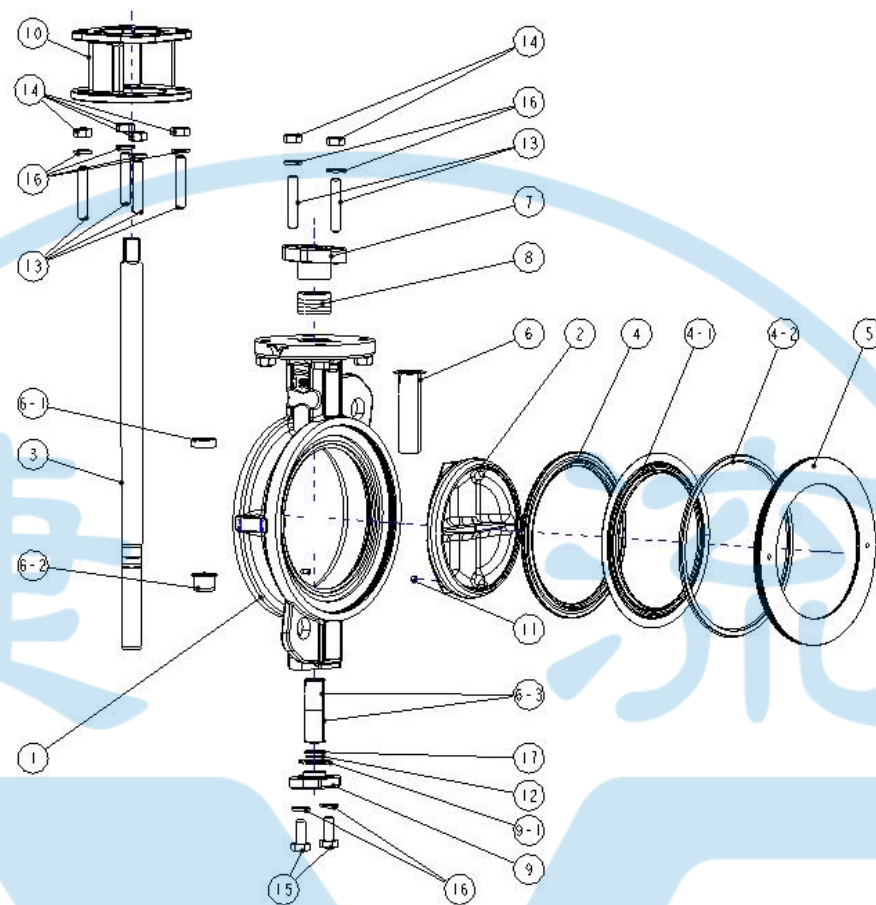

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
4	SOFT SEAT	*	10	YOKE	
4-1	METAL SEAT	*	11	STOP STUD	*
4-2	GASKTE.	*	12	SMOOTH PAD	*
5	RETAINER		13	STUD	
6	BUSHING	*	14	NUT	
6-1	BUSHING	*	15	BOLT	
6-2	BUSHING	*	16	SPRING WASHER	
6-3	BUSHING	*	17	SPRING (12" ↓)	*
7	GLAND				

VF-93_A(2"~24") / VF-96_A (5" and below)Series

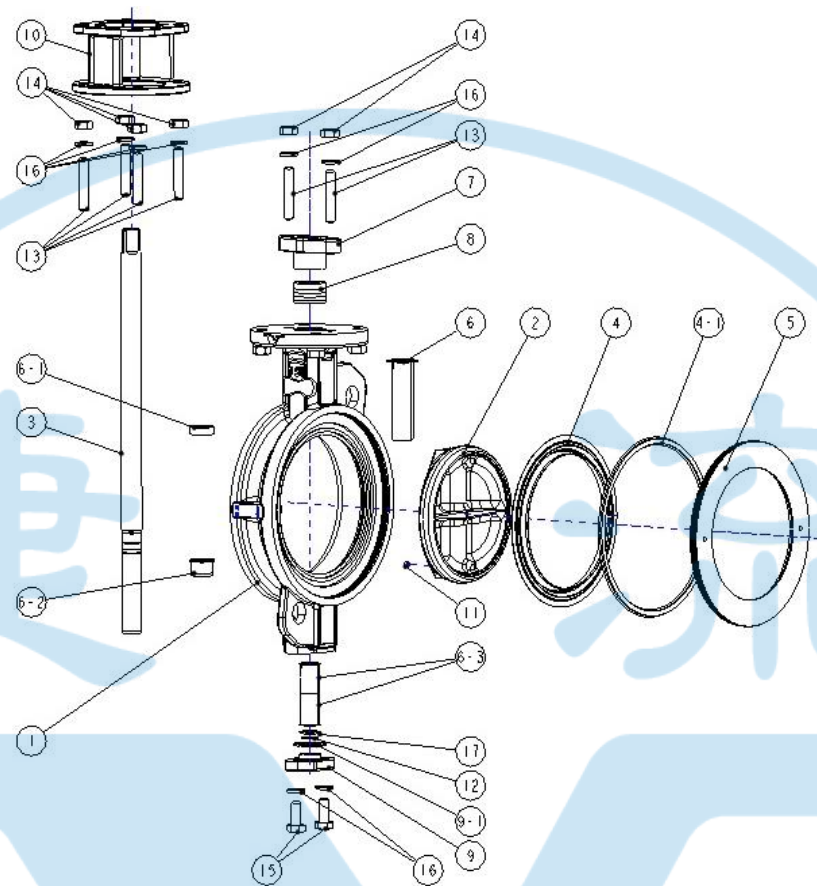

No.	Name	Spare parts	No.	Name	Spare parts
1	BODY		8	GLAND PACKING	*
2	DISC		9	BOTTOM COVER	
3	SHAFT		9-1	BOTTOM COVER GASKET	*
4	METAL SEAT	*	10	YOKE	
4-1	GASKTE.	*	11	STOP STUD	*
5	RETAINER		12	SMOOTH PAD	*
6	BUSHING		13	STUD	
6-1	BUSHING	*	14	NUT	
6-2	BUSHING	*	15	BOLT	
6-3	BUSHING	*	16	SPRING WASHER	
7	GLAND		17	SPRING (12" ↓)	*

15. Nameplate: (Fig.23)

15.1.

V : Value MARK

CE0035 : CE MARK

API 609 E8 : Valve Design Specification & Edition

TYPE : Model

NPS : Size

FLANGE : Flange Drilling

B16.34 : Comply with the standard ASME B16.34

38°C/___BAR : Applicable pressure at 38°C.

MAX TEMP ___°C ___bar : Applicable pressure at the highest temperature

BODY、DISC、SEAT、STEM : Material of the parts.

ASME BODY PRESSURE CLASS : Pressure Rating

SERIAL NO : Products NO.

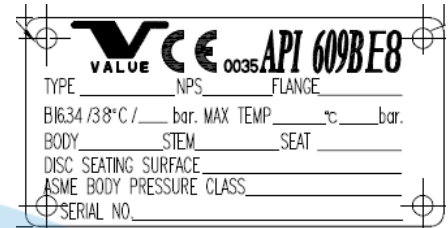


Fig.23

15.2. Arrow : Recommend Flow Direct.



Fig.24

16. Casting Mark :

16.1 Value Mark : Fig.25

16.2 Heat Number : Fig.26

16.3 Material : Fig.26

16.4 Size : Fig.27

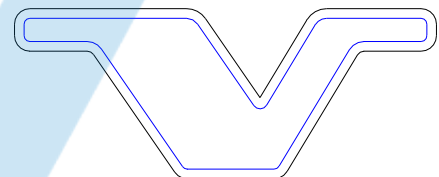


Fig.25



Fig.26

200

Fig.27

17. Caution

17.1. Application :

17.1.1. The valve can't be suitable for a flow contains solid granules, which could hurt the valve seats.

17.1.2. Be sure the valve materials could suit the flow, if the flow medium is corrosive.

- 17.1.3. Be sure the valve could be suitable the flange connection, pressure and temperature.
- 17.1.4. The valve services temperature range : -29 ~ 210°C.
- 17.1.5. Maximum working pressure could not be higher than its design pressure.
- 17.1.6 VF-92_ & VF-95_ , Fire safe design with API 607.

17.2. Installation :

- 17.2.1 Must know what media is in the pipeline.
- 17.2.2 Make sure the line is depressured.
- 17.2.3 Be sure the Arrow direction of the valve follows the flow direction.
- 17.2.4 Use protective clothing and equipment to avoid injury. Keep hands and other body parts out of the valve.
- 17.2.5. **ALWAYS ENSURE THE VALVE IS IN THE FULLY CLOSED POSITION BEFORE INSTALLATION, REMOVAL OR DISASSEMBLY.**
- 17.2.6. Before installation of the valve into the piping system visually inspect the valve to determine if any damage has occurred during shipping. Particularly, inspect the actuator, shaft, valve interior, valve body and flanges. For proper operation of the valves, the seat and disc seal must be undamaged. If other than superficial damage is discovered, contact Value Valves Co., Ltd. immediately, indicating the location and extent of the damage found.
- 17.2.7 The gaskets shall be free of injury , please change a new one if damaged.
- 17.2.8 After installed the valve in the pipeline, check leakage of flange connecting faces by using compressed air. (Fig.28)
- 17.2.9 Make sure the faces of valve, gaskets and flanges must be clean before installation.

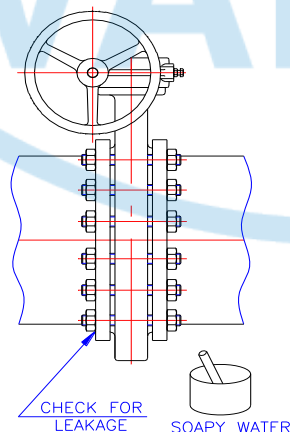


Fig.28

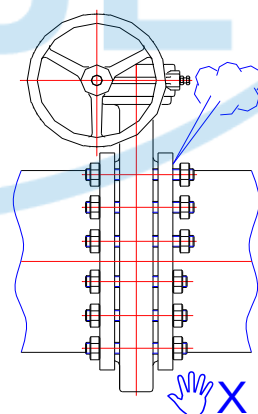


Fig.29

17.3. On Service :

- 17.3.1 Do not touch the valve body when it is on service.
- 17.3.2 Do not loose flange bolts, valve bolts when valve is on service. (Fig.29)
- 17.3.3 The valve must be supported when pipeline vibration, so that pipeline stresses are not transmitted to the valve and actuator.
- 17.3.4 Do not use a "F" wrench to operate the hand wheel of gear box. (Fig.30)

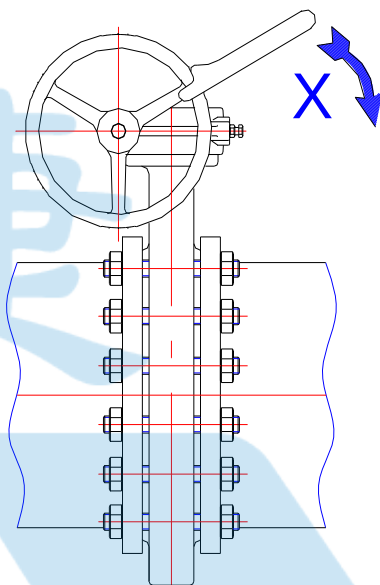


Fig.30

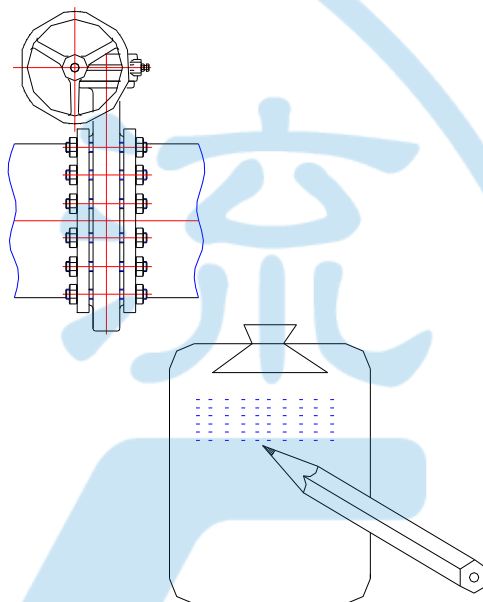


Fig.31

- 17.3.5 If there are any problems could not be eliminated during service , Please contact Value Valves Co., Ltd. and describe damage condition then we could serve you as soon as we could. (Fig.31)

17.4. Maintenance

- 17.4.1. Maintenance man should be trained before doing the repair.
- 17.4.2. Do not replace the gaskets when the pipeline was working or pressured.
- 17.4.3. Repainting the valve when it rusted.
- 17.4.4. If finding the parts of valve has been corroded, please replace a new one.
- 17.4.5. Please measure the thickness of the body when maintaining to realize the body is still workable or not. Please see Annex I .
- 17.4.6. Pay attention the abrasion of stem, disc and seats and realize they are still workable.
- 17.4.7. Do very clear mark and protection procedure when the flow medium is poison.
- 17.4.8. Please mark sure the piping no pressure and the temperature must be lower than 100°F before remove the valve.

Annex I

Check list for minimum wall thickness (ASME B 16.34)							
Minimum thickness (mm) for each pressure rating							
Size (in)	Items	Class 150	Class 300	Size (in)	Items	Class 150	Class 300
2	t min	5.5	6	24	t min	14.5	24.2
2.5	t min	5.8	6.5	26	t min	15.3	25.9
3	t min	6.1	7	28	t min	16.1	27.5
4	t min	6.5	7.7	30	t min	16.9	29.2
5	t min	6.8	8.7	32	t min	17.7	30.8
6	t min	7.1	9.4	34	t min	18.7	32.8
8	t min	8	11	36	t min	19.4	34.1
10	t min	8.8	12.7	40	t min	21	37.4
12	t min	9.6	14.3	42	t min	22	39.4
14	t min	10.4	16	44	t min	22.6	40.7
16	t min	11.2	17.6	46	t min	23.6	42.7
18	t min	12	19.3	48	t min	24.3	44
20	t min	12.9	20.9	50	t min	25.2	46
The minimum wall thickness was designed according to ASME B16.34-2017							